



11Mbps Wireless LAN PCI Adapter

User Guide

3CRDW696

<http://www.3com.com/>

<http://www.support.3com.com/registration/frontpg.pl>

Published July 2002

User Guide version 4.1.2

3Com Corporation 5400 Bayfront Plaza Santa Clara, California 95052-8145

Copyright © 2002 3Com Corporation. All rights reserved. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from 3Com Corporation.

3Com Corporation reserves the right to revise this documentation and to make changes in content from time to time without obligation on the part of 3Com Corporation to provide notification of such revision or change.

3Com Corporation provides this documentation without warranty, term, or condition of any kind, either implied or expressed, including, but not limited to, the implied warranties, terms or conditions of merchantability, satisfactory quality, and fitness for a particular purpose. 3Com may make improvements or changes in the product(s) and/or the program(s) described in this documentation at any time.

3Com is a registered trademark and the 3Com logo is a trademark of 3Com Corporation. Microsoft and Windows are registered trademarks of Microsoft Corporation. All other company and product names may be trademarks of the respective companies with which they are associated.

Unless otherwise indicated, 3Com registered trademarks are registered in the United States and may or may not be registered in other countries. If there is any software on removable media described in this documentation, it is furnished under a license agreement included with the product as a separate document or in the hard copy documentation. If you are unable to locate a copy, please contact 3Com and a copy will be provided to you.

UNITED STATES GOVERNMENT LEGEND

If you are a United States government agency, then this documentation and the software described herein are provided to you subject to the following:

All technical data and computer software are commercial in nature and developed solely at private expense. Software is delivered as "Commercial Computer Software" as defined in DFARS 252.227-7014 (June 1995) or as a "commercial item" as defined in FAR 2.101(a) and as such is provided with only such rights as are provided in 3Com's standard commercial license for the software. Technical data is provided with limited rights only as provided in DFAR 252.227-7015 (Nov 1995) or FAR 52.227-14 (June 1987), whichever is applicable. You agree not to remove or deface any portion of any legend provided on any licensed program or documentation contained in, or delivered to you in conjunction with, this user guide.

Chapter 1 - INSTALLING YOUR WIRELESS LAN PCI ADAPTER	5
Introduction	5
Wireless LAN Basics	5
Installation for Microsoft Windows Platforms.....	6
Install Procedure for Microsoft Windows 95/OSR2/98/98SE/ME/2000/XP	7
Install Procedure for Microsoft Windows NT4.0	8
Installing the Wireless LAN PCI Adapter Hardware (All Operating Systems).....	8
Connecting Network Protocols	10
Uninstall Procedure	10
 Chapter 2 - USING THE CONFIGURATION UTILITY	 11
Configuring the Wireless PCI Adapter	11
Configuring Automatic Network Connections with Windows XP	13
 Chapter 3 - TECHNICAL SPECIFICATIONS	 16
Technical specifications of 3Com 11Mbps Wireless LAN PCI Adapter	16
 Chapter 4 - TECHNICAL SUPPORT	 18
Online Technical Services	18
Support from Your Network Supplier	19
Support from 3Com	19
Region URL for Regional Web Site	19
Returning Products for Repair	20
3Com Connection Assistant	20
 Chapter 5 - REGULATORY COMPLIANCE INFORMATION	 21
FCC Part 15 Notice (Applicable to use within the USA)	21
FCC Declaration of Conformity.....	21
Industry Canada Notice (Applicable for use within Canada).....	22

Industry Canada (IC) Emissions Compliance Statement 22

European Community Declaration of Conformity 22

1

Installing Your Wireless LAN PCI Adapter

Introduction

Thank you for purchasing the 3Com 11Mbps Wireless LAN PCI Adapter. This user guide will assist you with the installation procedures for the PCI Adapter.

Your package should contain the 3Com 11Mbps Wireless LAN PCI Adapter and the *Installation CD*. The Installations CD contains the following items:

- Drivers and Configuration Utility program used to manage the 3Com 11Mbps Wireless LAN PCI Adapter and to establish a wireless connection with your LAN
- README.TXT file with updated information about your Wireless LAN PCI Adapter
- This *Wireless LAN PCI Adapter User Guide*
- 3Com Connection Assistant
- Adobe Acrobat Reader

Wireless LAN Basics

Wireless LAN (Local Area Networks) systems offer a great number of advantages over a traditional, wired system. Wireless LANs (WLANs) are more flexible, easier to setup and manage and often more cost effective than their wired equivalents.

Using radio frequency (RF) technology, WLANs transmit and receive data over the air, minimizing the need for wired connections. Thus, WLANs combine data connectivity with user mobility, and, through simplified configuration, enable movable LANs.

With wireless LANs, users can access shared information without looking for a place to plug in and network managers can set up or augment networks without installing or moving wires. Wireless LANs offer the following productivity, convenience and cost advantages over traditional wired networks:

Mobility—Wireless LAN systems can provide LAN users with access to real-time information anywhere in their organization. This mobility supports productivity and service opportunities not possible with wired networks.

Installation Speed and Simplicity—Installing a wireless LAN system can be fast and easy and can eliminate the need to pull cable through walls and ceilings.

Installation Flexibility—Wireless technology allows the network to go where wires cannot go.

Reduced Cost-of-Ownership—While the initial investment required for wireless LAN hardware might be higher than the cost of wired LAN hardware, overall installation expenses and life-cycle costs will be significantly lower. Long-term cost benefits are greatest in dynamic environments requiring frequent moves, adds, and changes.

Scalability—Wireless LAN systems can be configured in a variety of topologies to meet the needs of specific applications and installations. Configurations are easily changed and range from peer-to-peer to full infrastructure networks, also allow roaming over a broad area.

Installation for Microsoft Windows Platforms

The following section will assist you in installing the 3Com 11Mbps Wireless LAN PCI Adapter successfully. For operating systems except Windows NT 4.0, you will first install the software (Utility) and then attach the 3Com 11Mbps Wireless LAN PCI Adapter in your system, and finally set the network properties to accommodate resource sharing and select the type of wireless network that you wish to install. For Windows NT 4.0, you will insert the 3Com 11Mbps Wireless LAN PCI Adapter in your system, then install the software. The 3Com 11Mbps Wireless LAN PCI Adapter can easily be installed and used, allowing your computer to use network resources.

Installation Overview

Here are some steps you will perform in establishing your wireless network connection:


- Install the 11Mbps Wireless Access Point (AP) first if you plan to use one. The AP is needed to use with Infrastructure network mode, but is not needed for ad hoc (peer to peer) mode.
- Install the software using the Install CD. (For Windows NT 4.0 install the hardware first, then the software)
- Install the 3Com 11Mbps Wireless LAN PCI Adapter hardware.
- Install the network protocol(s) required to communicate on your network. Typically you will need the TCP/IP protocol.

Install Procedure for Microsoft Windows 95OSR2/98/98SE/ME/2000/XP

Follow these steps to install the WLAN PCI Adapter (do not insert your 3Com 11Mbps Wireless LAN PCI Adapter until instructed):

- 1 Power on your computer and allow Windows 95OSR2/98/98SE/ME/2000/XP to load fully.
- 2 Insert the *Installation CD* in the CD-ROM and then click *Install Software*.
- 3 Click *Yes* to accept the license agreement.
- 4 The installer copies the files into default directory:

C:\Program Files\3Com\3Com 11Mbps Wireless LAN PCI Adapter

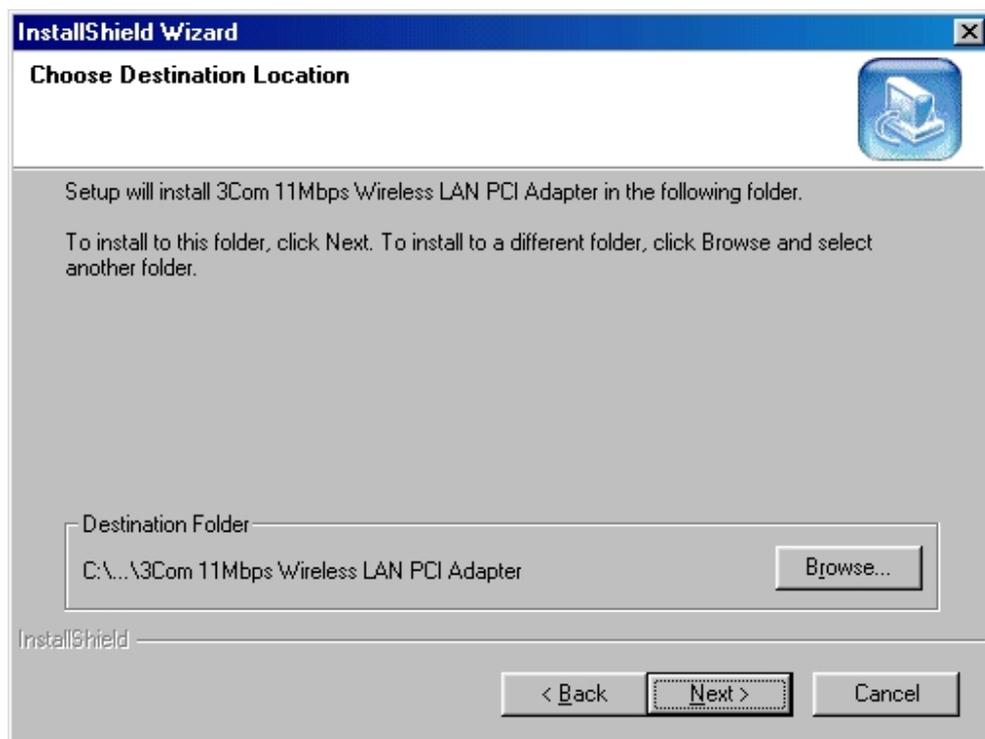

- 5 Click *Browse* to change to a different installation path .
- 6 Select "No, I will restart my computer later" and click *Finish*.
- 7 When asked, select the country or region where the Wireless LAN PCI Adapter will be used.
- 8 Click *Install Hardware* on the main 3Com 11Mbps Wireless LAN installation screen. The instructions are also listed below for Installing the Wireless LAN PCI Adapter hardware.

Additional Install Procedure for Microsoft Windows XP

After completing the installation of the Wireless LAN PCI Adapter hardware in your system as described in step 8, Windows XP users will need to complete the following steps when the system detects new hardware:

- 1 Select "Install the software automatically (Recommended) ", and then click *Next* to continue.
- 2 Once your system detects the driver, Microsoft Windows XP displays a warning message. Click *Continue Anyway*.

3 After copying the files to your system, click *Finish* to complete the setup.

Install Procedure for Microsoft Windows NT4.0


- 1 Install the Wireless LAN PCI Adapter Hardware first. Click Install Hardware on the main 3Com 11Mbps Wireless LAN installation screen. The instructions are also listed below for Installing the Wireless LAN PCI Adapter hardware.
- 2 Go to the Network Control panel-> select "Adapter" tab, and then add "Adapter".
- 3 Respond to the prompts as they appear Click "Have Disk".
- 4 If you are prompted for the drivers, enter *d:\drivers\NT*, where d: is the location of the CD-ROM
- 5 The device will show up on the device list
- 6 Select the "3Com 3CRDW696 Wireless LAN PCI Adapter" and proceed with the installation instructions.
- 7 The system will prompt for the IP address setting.
- 8 Restart the system
- 9 Insert the *Installation CD* in the CD-ROM and then click *Install Software*.
- 10 Follow the setup wizard step by step to complete the Utility installation.

Installing the Wireless LAN PCI Adapter Hardware (All Operating Systems)

Follow these steps to install the 3Com 11Mbps Wireless LAN PCI Adapter to your system after installing software and drivers as described above.

(Windows will recognize the WLAN adapter and auto detect the driver):

- 1 Turn off power to your computer and unplug the power cord.
- 2 Remove the cover of your computer.
- 3 Locate an empty PCI slot and remove its slot cover. Save the screw.

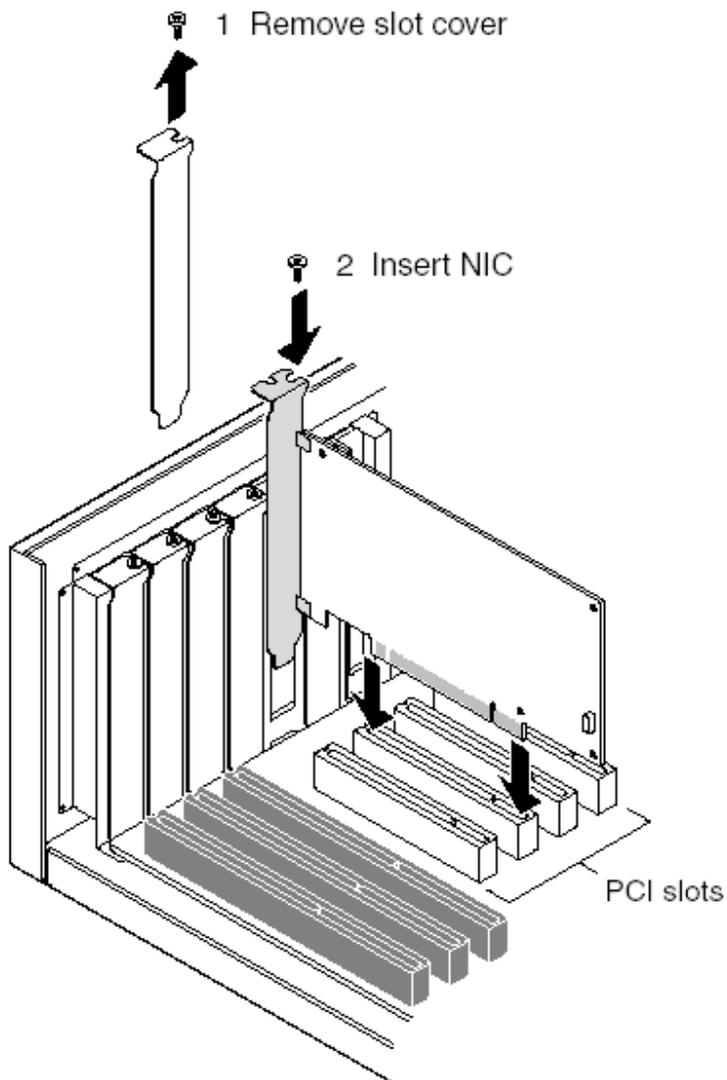

- 4 Carefully insert the Wireless LAN PCI Adapter into the selected slot until it seats snugly. The antenna on Wireless LAN PCI Adapter is a separate piece. Once the PCI Adapter is seated firmly, you can screw the antenna to the outside of the faceplate and adjust for best reception.
- 5 Secure the card with the screw that you removed earlier.
- 6 Replace the cover of your PC, ensure the antenna is attached properly to the Wireless LAN PCI Adapter, and plug in the PC power cord.
- 7 Turn on the power to your computer.

Connecting Network Protocols

Follow the instructions in your operating system help *Start Menu>Help* for Connecting to Networks. Check with your network administrator to know which protocols to add and to get other network configuration information.

Uninstall Procedure

If you want to uninstall the Wireless LAN PCI Adapter, just select

Start Menu>Program File>3Com Wireless>Uninstall

The uninstall removes Program icons, registry entry files, and files used by the adapter.

Link Quality—active when the node is in Infrastructure Mode. The bar graph displays the quality of the link between the node and Access Point. It summarizes the quality of the link over the bar graph, which can take on one of the following values:

“Poor”

“Fair”

“Good”


“Very Good”

“Excellent”

Signal Strength—active when the node is in Infrastructure Mode. The bar graph displays normalized signal strength as reported by the radio, averaged over all frames over 100 bytes long that are received from the Access Point.

Connections

The Connections Tab shows the current status of available APs or Ad-Hoc channels within the network.

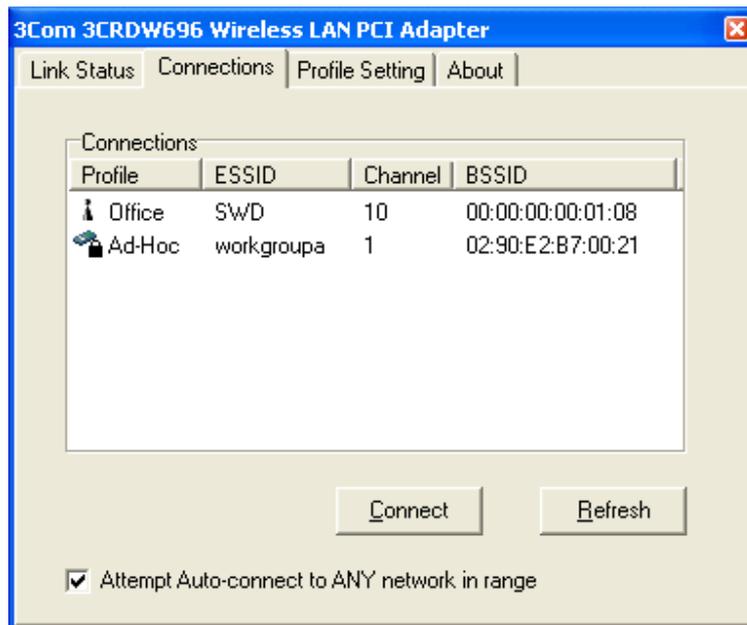

You may select a profile or SSID from above the list, click “Connect” to connect with the AP.

Click “Refresh” to rescan the network with the site survey function. It detects and lists all available APs within the network.

Place a check mark in the field if you wish to Attempt Auto-connect to any network in range.

Profile Setting

Profile Setting allows users to create profiles for different network environments.

Click the “New” button to create new profiles.

Click the “Edit” button to edit the selected profile.

Click the “Delete” button if you wish to delete selected profiles.

Profile Name —the name of the profile or group of setting used to connect with a particular network. The name is for your benefit and can consist of up to 48 characters.

SSID — Service Set Identifier may also be referred to as a *Network Name* because it is the name that identifies a wireless network service set. The SSID you enter must match the network SSID on the access point in infrastructure mode or the other devices in Ad Hoc mode in order to connect.

Network Type—allows you to select from a list of supported Network “Modes”. The two modes displayed will be: “Ad Hoc” or “Infrastructure”.

Ad Hoc—the IEEE 802.11 peer-to-peer mode of operation. In 802.11Ad Hoc only one wireless “cell” is supported for each different SSID. All communication is done from

Client to Client without the use of an Access Point. 802.11 Ad Hoc networking uses the same SSID for establishing the wireless connection over the selected channel.

Infrastructure—this mode of operation requires the presence of an 802.11 Access Point. All communication is done via the Access Point, which relays packets to other wireless Clients in the Access Point's Basic Service Set (BSS) as well as to nodes on a wired network such as Ethernet.

Transmit Rate—rate at which the client of an AP transmits the data packets. You may set this to fixed 1Mbps, fixed 2 Mbps, fixed 5.5 Mbps, fixed 11 Mbps, and/or Auto (tries 11Mbps and falls back to lower rates).

Encryption (WEP)—additional measure of security on your wireless network which can be achieved by using WEP (Wired Equivalent Privacy) encryption.

When an encrypted frame is received it will only be accepted if it decrypts correctly. This happens only if the receiver has the WEP Key used by the transmitter.

This panel allows the selection of none, 64-bit, or 128-bit encryption and the entry of up to four encryption keys according to the WEP function select. (This is also sometimes referred to as 40-bit or 104-bit encryption) To be written to the driver and registry, each key must consist of either hexadecimal digits, which means that only digits 0-9 and letters A-F are valid entries, or alphanumeric. If entered incorrectly the program will not write keys to a driver. The key used must match exactly the key used by your access point or by other clients in Ad Hoc mode in order to connect.


About

The About tab shows the product version including the detail of Driver, Application and firmware version. Users must use this version number when reporting their problems to technical support.

Configuring Automatic Network Connections with Windows XP

Microsoft Windows XP provides a Wireless LAN Zero Configuration, which means that Windows XP recognizes the adapter and provides the necessary driver and configuration software instead of the Configuration Utility software provided with the adapter.

If your station is within range of a Wireless LAN access point, Windows XP announces that one or more wireless networks are available and suggests that you click the Network icon to see a list of available networks.

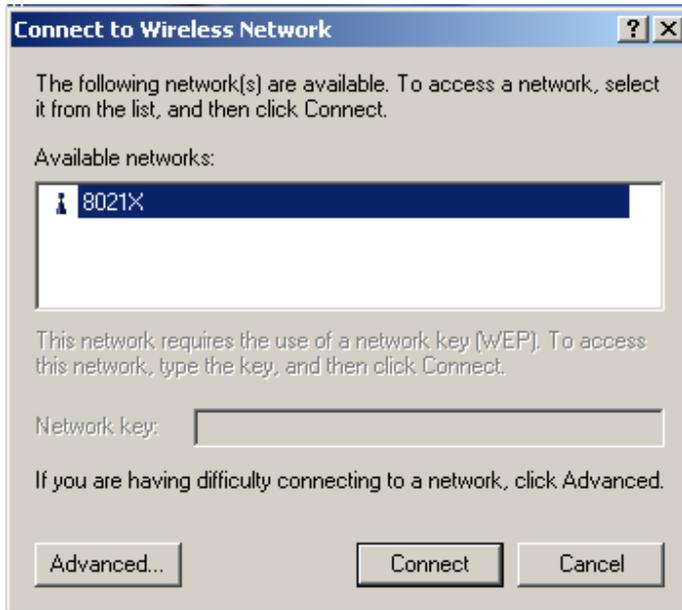

To configure one or more wireless networks for auto connection, follow these steps:

- 1 Right-click the Network icon in the notification area at the bottom of the screen to display a pop-up menu. Click *Open Network Connections*.
- 2 Right-click the Wireless Network Connection icon and click *Properties* in the Pop-up menu. Windows XP displays the Wireless Network Connection Properties dialog.
- 3 Select the Wireless Networks tab. Notice that the wireless network that was present when you first inserted the wireless NIC is already listed.
- 4 To add another network to the list, click the *Add* button on the Wireless Networks tab to display the Wireless Network Properties dialog.
- 5 Type a network name (SSID) in the Network name test box.
- 6 If you have implemented a system automatically providing users with network keys and/or WEP keys, click *OK* to save this network SSID and move on to the next network that you want to configure.
- 7 If you are setting up an ad hoc mode wireless connection, click the last check box in the dialog. Otherwise, if you are configuring a connection to an AP, leave the check box uncheck and click *OK*.

Windows XP adds the network to the list of preferred networks in the Wireless Network Connection Properties dialog box.

- 8 When you finish adding all wireless networks to which your computer needs access, click *OK*.

Note: XP includes support for the IEEE 802.1X standard for port-level authentication of stations in the network.

If for some reason you prefer to use the Configuration Utility that came with the Wireless LAN PCI Adapter with Windows XP, you should not use Windows to configure wireless network settings.

Note: Only follow these steps if you wish to disable Windows XP Wireless LAN Zero Configuration.

- 1 Select START>CONTROL PANEL
- 2 Double click NETWORK and INTERNET CONNECTIONS

- 3 Double click NETWORK CONNECTIONS icon
- 4 Highlight the Wireless Network Connection by clicking only once
- 5 Under Network Tasks on the left, click CHANGE settings of this Connection
- 6 Select the WIRELESS NETWORKS tab
- 7 Uncheck the box labeled Use Windows to configure my wireless network settings
- 8 Click OK

3

Technical Specifications

Technical specifications of 3Com 11Mbps Wireless LAN PCI Adapter

Driver support

Microsoft Windows XP

Microsoft Windows 98

Microsoft Windows 98SE

Microsoft Windows 2000

Microsoft Windows ME

Microsoft Windows 95 OSR2

Microsoft Windows NT 4.0 (Service Pack 6 or above)

Standards supported

IEEE 802.11b standard for Wireless LAN

Wi-Fi

All major networking standards (including TCP/IP, IPX)

PCI Bus power management interface specification 1.0

ACPI 1.0

PCI 2.2

Environmental

Operating temperature:

0°C to 55°C (Operating), -20 to 65°C (Storing)

Max. Humidity: 95% Non-condensing

Power specifications

Transmit power:: +18 dBm @ Nominal Temp Range (Typical)

Operating Voltage: 3.3V and 5V \pm 5%

Radio specifications

Operating Range:

Open space: up to 300m;

Indoor: up to 70m

Frequency range:

2.4-2.4835 GHz, direct sequence spread spectrum

Number of Channels:

Europe: 13 (1-13)

US: 11 (1-11)

France: 4 (10-13)

Antenna system:

Detachable dipole antenna with SMA (male) connector

Mobility:

Seamless roaming across cell boundaries with handover

Specific features

Supported bit rates:

11 Mbps

5.5 Mbps

2 Mbps

1 Mbps

Data encryption:

64 /128 bit WEP Encryption

Utility Software:

Configuration utility software

A

Technical Support

3Com provides easy access to technical support information through a variety of services. This appendix describes these services.

Information contained in this appendix is correct at time of publication. For the most recent information, 3Com recommends that you access the 3Com Corporation World Wide Web site.

Online Technical Services

3Com offers worldwide product support 24 hours a day, 7 days a week, through the following online systems:

- World Wide Web site
- 3Com Knowledgebase Web Services
- 3Com FTP site

World Wide Web Site

To access the latest networking information on the 3Com Corporation World Wide Web site, enter this URL into your Internet browser:

<http://www.3com.com/>

This service provides access to online support information, such as technical documentation and a software library, as well as support options that range from technical education to maintenance and professional services.

3Com Knowledgebase Web Services

The 3Com Knowledgebase is a database of technical information to help you install, upgrade, configure, or support 3Com products. The Knowledgebase is updated daily with technical information discovered by 3Com technical support engineers. This complimentary service, which is available 24 hours a day, 7 days a week to 3Com customers and partners, is located on the 3Com Corporation World Wide Web site at:

<http://knowledgebase.3com.com>

3Com FTP Site

Download drivers, patches, software, and MIBs across the Internet from the 3Com public FTP site. This service is available 24 hours a day, 7 days a week.

To connect to the 3Com FTP site, enter the following information into your FTP client:

- Hostname: **ftp.3com.com**
- Username: **anonymous**
- Password: **<your Internet e-mail address>**

NOTE: With Web browser software, such as Netscape Navigator and Internet Explorer, you do not need a user name and password.

Support from Your Network Supplier

If you require additional assistance, consult your network supplier. Many suppliers are authorized 3Com service partners who are qualified to provide a variety of services, including network planning, installation, hardware maintenance, application training, and support services.

When you consult your network supplier, have the following information ready:

- Product model name, part number, and serial number
- A list of system hardware and software, including revision levels
- Diagnostic error messages
- Details about recent configuration changes, if applicable

If you are unable to consult your network supplier, see the following section on how to contact 3Com.

Support from 3Com

If you are unable to obtain assistance from the 3Com online technical resources or from your network supplier, 3Com offers technical telephone support services. To find out more about your support options, go to the Web site associated with your region of the world shown below.

Region	URL for Regional Web Site
Asia and the Pacific Rim	ap.3com.com/contacts/support-contacts.html
Africa, Europe, and the Middle East	emea.3com.com/support/supportnumbers.html
Latin America	lat.3com.com/lat/support/index.html
North America	csoweb4.3com.com/contactus/

When you contact 3Com for assistance, have the following information ready:

- Product model name, part number, and serial number
- A list of system hardware and software, including revision levels
- Diagnostic error messages
- Details about recent configuration changes, if applicable

Returning Products for Repair

Before you send a product directly to 3Com for repair, you must first obtain an authorization number. Products sent to 3Com without authorization numbers will be returned to the sender unopened, at the sender's expense. To obtain an authorization number, go to the Web site listed above for your region.

3Com Connection Assistant

The 3Com Connection Assistant is included on the Installation CD and is interactive software that gives you an easy to use diagnostic and repair tool. Using this tool makes troubleshooting easier and helps you quickly resolve problems. Go to D:\Install\Connection Assistant\Install.exe (where D: is your CD-ROM drive) to find this utility.

Using the Connection Assistant you can:

- Automatically check your computer and repair problems
- Search for solutions for specific hardware or software problems
- Connect, via the Internet, to technical support when you need assistance with your computer hardware and software
- Get assistance even if you are not connected to the Internet

Connection Assistant Toolbar

The toolbar at the top of the Connection Assistant Home Page includes these options:

- **Connection Assistant Home**—clicking this link will always return you to the Connection Assistant Home Page.
- **Assisted Service**—Click this link to send a request for assistance to a technical support engineer if you need help fixing a Network Interface Card problem.
- **Options**—Set different security, message, and display options for your Connection Assistant pages.
- **Help**—Browse Help information for a variety of topics, links and features related to the 3Com Connection Assistant

Regulatory Compliance Information

NOTE: This product contains encryption. It is unlawful to export out of the U.S. without obtaining a U.S. Export License.

FCC Part 15 Notice (Applicable to use within the USA)

CAUTION: FCC Radio-Frequency Exposure Notice

This device generates and radiates radio-frequency energy. In order to comply with FCC radio-frequency radiation exposure compliance requirements, a separation distance of at least 2.5 cm (1.0 inch) must be maintained between the antenna of the device and all persons.

This product does not contain any user serviceable components. Any unauthorized product changes or modifications will invalidate 3Com's warranty and all applicable regulatory certifications and approvals.

Unintentional Radiator

WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device as applicable, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1 This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undersired operation.

2 The user may find the following booklet prepared by the Federal Communications Commission helpful: *The Interference Handbook*

This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402.

Stock No. 004-000-00345-4.

FCC Declaration of Conformity

3Com Corporation, 3930 W. Parkway Blvd., PO Box 704010, West Valley City, UT 84119, (800) 527-8677

Declares that the Product:

Date: July 1, 2002

Brand Name: 3Com Corporation


Model Number: 3CRDW696

Equipment Type: 802.11b Wireless USB Adapter

Complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1 this device may not cause harmful interference, and

2 this device must accept any interference received, including interference that may cause undesired operation.

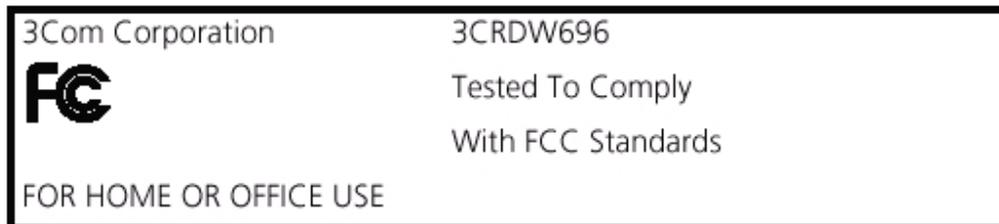

Industry Canada Notice (Applicable for use within Canada)

This device complies with Canadian RSS-210.

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's website www.hc-sc.gc.ca/rpb.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil est conforme à la norme CNR-210 du Canada.

Pour empêcher que cet appareil cause du brouillage au service faisant l'objet d'une licence, cet appareil doit être utilisé à l'intérieur seulement et devrait être placé loin des fenêtres afin de fournir un écran de blindage maximal.

L'installateur du présent matériel radio doit s'assurer que l'antenne est située ou pointée de manière à ce que cette dernière n'émette pas de champs radioélectriques supérieures aux limites spécifiées par Santé Canada pour le grand public; consulter le Code de sécurité 6, disponible sur le site Web de Santé Canada, à l'adresse suivante: www.hc-sc.gc.ca/rpb.

Industry Canada (IC) Emissions Compliance Statement

This Class B digital apparatus complies with Canadian ICES-003.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Safety Notice

This device has been tested and certified according to the following safety standards and is intended for use only in Information Technology Equipment which has been tested to these or other equivalent standards:

UL Standard 60950 (3rd Edition)/ CSA C22.2 No. 60950

IEC 60950

EN 60950

European Community Declaration of Conformity

Hereby, 3Com Corporation, declares that this Wireless LAN product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Due to frequency restrictions, it is necessary to select your country before using this radio device. Refer to your 3Com Wireless LAN Manager online help for details.

3Com Wireless LAN PC Card User Guide version 1.0.0

Published July, 2002